SPOTLICHT

INFUSIBLE INK FRUIT COASTER

Nº 09.20.07 PROJECT SHEET



L

I.

INFUSIBLE INK FRUIT COASTER

e Easy

WHAT YOU'LL NEED

- Materials to Cut Infusible Ink Paper of your choice, we are using Cricut Infusible Ink Transfer Sheet Patterns, Bright Green, Ultraviolet, Jungle Safari - Yellow, Black, Red
- Design Space apps
- Cricut EasyPress 2
- Cricut EasyPress Mat
- Cricut Explore Air 2 or Cricut Maker
- Cricut heat resistant tape
- Cricut ceramic coaster
- StandardGrip Machine Mat 12" x 12"
- Lint roller
- Butcher paper
- Tweezer
- Scissors
- Weeding tools
- Design Space Apps and subscription

INSTRUCTIONS

PREPARATION

Step 1 – Go to Cricut Design Space and search project fruit slice coaster.

Step 2 - If you want to alter the project, select Customize, then use the tools in the Edit panel to make changes before you cut.

Step 3 – Be sure to Mirror the mat when using an Infusible Ink Transfer Sheet and place the shiny side (clear liner) down on the mat.

Step 4 – Follow the prompts in Design Space to cut the images from the Infusible Ink Transfer Sheet.

CUT

Step 1 - Be sure to mirror the mat when using an Infusible Ink[™] Transfer Sheet and place the shiny side (clear liner) down on the mat. Step 2 - Follow the prompts in Design Space[®] to cut the images from the Infusible Ink[™] Transfer Sheet. **Step 3** – Remove the unneeded pieces of vinyl using a Weeder Tool. It is usually easiest to move from the inside out when weeding.

ASSEMBLE

Step 1 - Follow below stacking order:

Stacking Order:

- Cricut EasyPress 2
- Butcher paper
- Cricut Ceramic Coaster Blank
- · Infusible Ink Transfer Sheet design
- White Cardstock (80 lb) or 4 layers butcher paper
- Cricut EasyPress Mat*

Other Supplies:

- · Lint-free cloth
- *Not recommended without Cricut EasyPress Mat

Step 2 - PREPARATION

- Preheat Cricut EasyPress 2 to 200°C
- Wipe tile with lint-free cloth
- Cover mat with cardstock to protect surface
- Preheat tote bag for 15 s
- Remove butcher paper from top of tote bag

Step 3 - APPLICATION

- Position design on coaster
- Place coaster with design face down on cardstock
- Cover with clean butcher paper
- Center machine, press with no pressure at 200°C for 240 s without moving press
- Lift press
- Remove butcher paper

CAUTION - Coaster will be very hot. Let cool completely. Remove coaster from design.

Step 4 - CARE

Wash with warm water and glass cleaner. Do not use steel wool, colored cleansing agents, or scrubbing pads.

