


# EXTERIOR ROLL UP BLIND INSTALLATION INSTRUCTIONS



**Pack Contains: Blind, Screws, Floding Arm, Cleat, Hold Down Bracket**

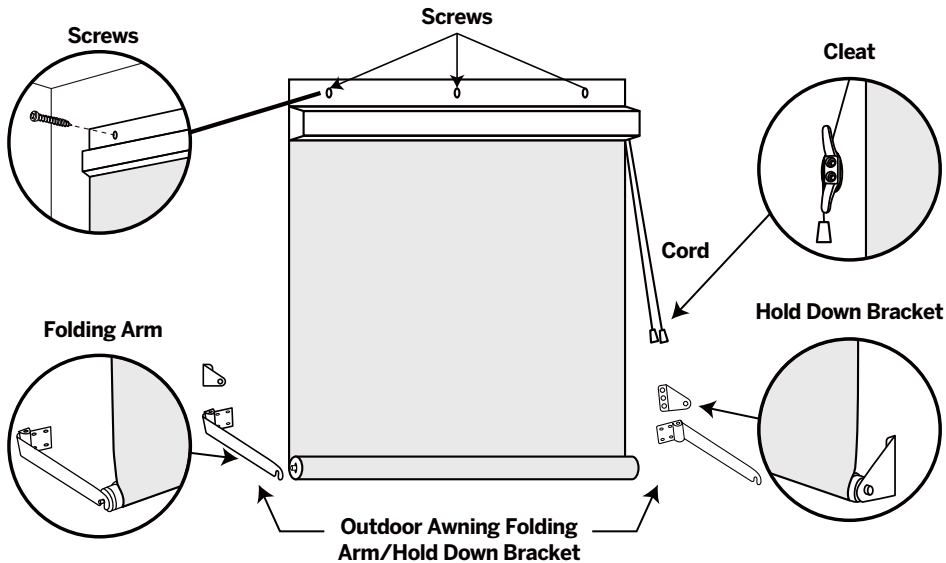

## Step 1. Blind Installation

1. Measure your window with a metal tape measure.
2. Unroll blind and place over window in desired position. Mark holes for drilling head rail and bottom brackets.
3. Drill holes and install blind following the instructions provided. Remember to fit safety cleat.
4. Use pull cord to roll up blind to desired height.

## Step 2. Hold Down Bracket & Folding Arm Installation

There are two bottom arm/bracket options available. Select either/both 'folding arm' and/or 'hold down bracket' option (whatever is preferred).


Position bottom folding arms/hold down brackets evenly at each side of the blind then locate and tighten screws.

Make sure that the blind slots into folding arms/hold down brackets firmly.


1. Use outdoor awning folding arms/hold down brackets to secure blinds firmly to windows or doors.
2. Using screws, screw outdoor awning folding arms/hold down brackets to the wall then fix bottom rail pin end onto the folding arms/hold down brackets.

## Step 3. Cord Cleat Installation

1. The cord cleat is required to be fixed to a wall or window frame.
2. Wrap the cord around the cleat.

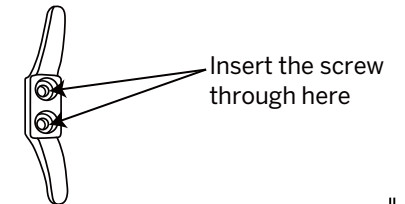

If a **cleat** is used to secure the cord it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat.

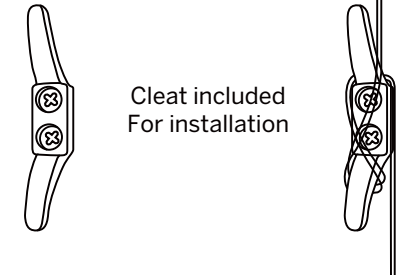

## Fitting Instructions

Do not cut the tape holding blind at the ends. Position blind in desired area as level as possible. Locate screw in centre hole. but do not tighten.

Do not let blind go.

Re-align blind level and position outer screw, then tighten, undo cord, hold the cord in one hand and snip the tape with the other hand. Slowly release cord to lower blind.

SPOTLIGHT PTY LTD  
PO BOX 1135  
South Melbourne VIC 3205  
service@spotlight.com.au  
Ph:+613 9675 400 FAX:+613 9675 4583