
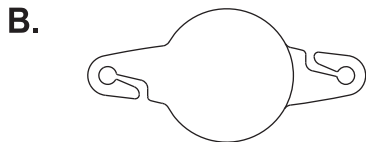


PVC Roll Up Blind

Simple Assembly Instructions – Please keep for future reference

PACKAGE INCLUDES

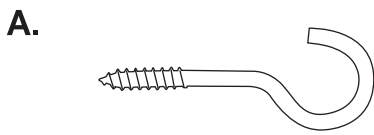

HARDWARE






Blind Width	120cm	180cm
A. Eye Hook	3	3
B. Fastener	2	3

TOOLS NEEDED


1. Tape Measure
2. Drill & 1/16" bit
3. Pliers
4. Pencil

1. HOW TO INSTALL


Before installing make sure blind is fully rolled up and secured.

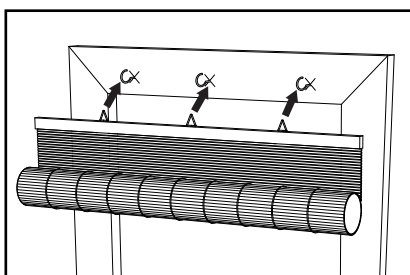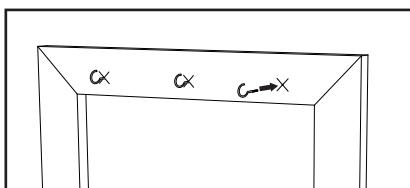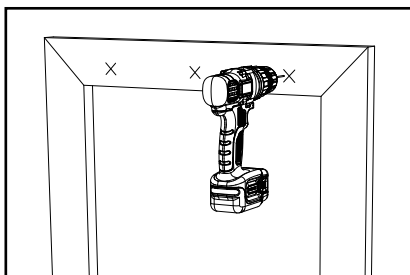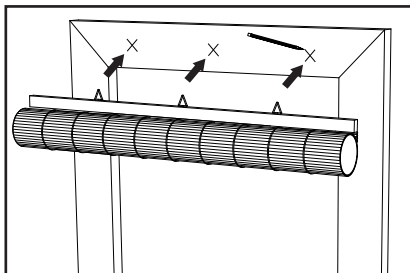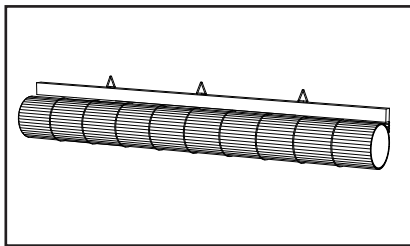

INSIDE MOUNT

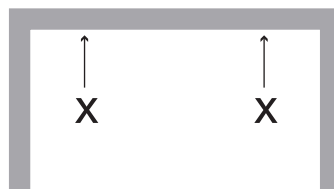

OUTSIDE MOUNT

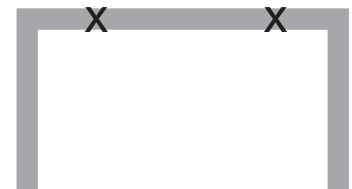

2. POSITION BLIND

Make sure your marks for the screw holes are level or at least the same distance from the top of the window.

For best accuracy, measure the distance with a tape measure.

3. INSTALL EYE HOOKS


Drill 1/16" pilot holes at the X marks, insert eye hooks and tighten. If necessary, use pliers to tighten.

4. HANG THE BLIND

To hang the blind, simply hook the mounting eyelets over the eye hooks .


Step 1

Standing in the center of the blind, roll up to the desired height.

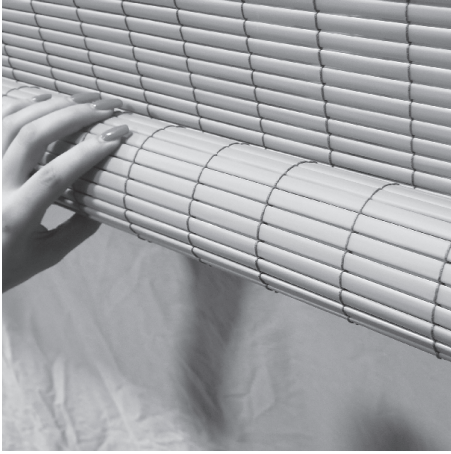


Step 2


Gently hook the fasteners to the **shiny weaving threads on the backside** of the blind.

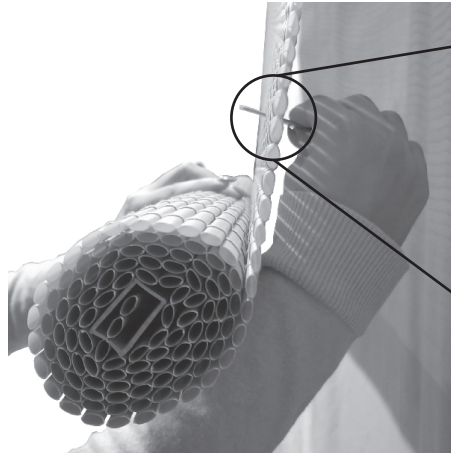

Side View

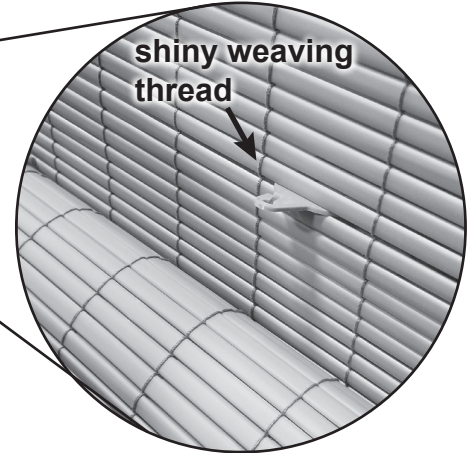

Front View

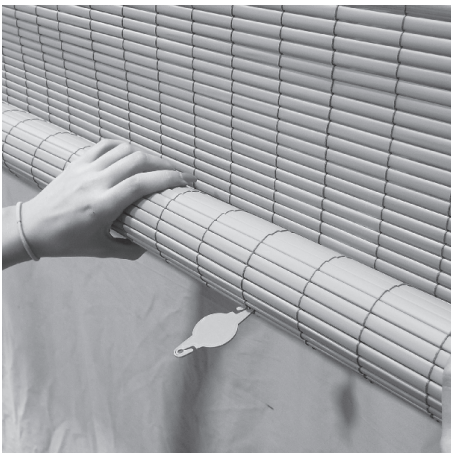

Step 3

Roll up blind until fasteners appear on the front of the blind.




Step 4

Hook the fasteners to the same shiny threads on the front side of the blind.



Step 5

Repeat until all fasteners are secure and level.

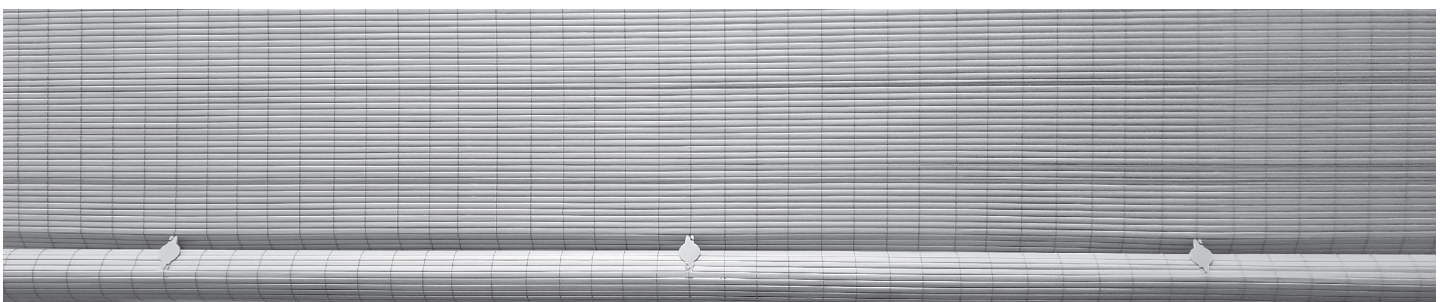

Attention To ensure blind hangs level place the fasteners on the same slat row.