


# WINDOWSHADE OUTDOOR SUNSCREEN BLIND

## INSTALLATION INSTRUCTIONS

### Step 1. Pre-Installation

The Windowshade outdoor sunscreen blind can be installed as Face mount (on the wall or on the outside of the window frame) or Top mount (to the ceiling)

Determine the location of where the blind is to be mounted and ensure that there are no obstructions (e.g. Handles, Locks, Frame, etc) that could interfere with the blind when rolled down. The Hand Crank, which is used to wind the outdoor sunscreen blind up and down, is located on the right-hand side.

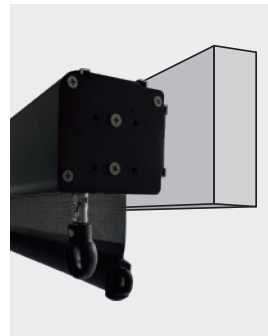

Face Mount



Top Mount

### Step 2. Bracket Installation

The Outdoor Sunscreen blind comes complete with all fittings for installation. 3-4 pelmet brackets depending on the length of blind purchased, Screws for timber installation & Wall plugs for mounting in masonry



Pelmet Bracket

### Wall Installation

If there is a ceiling that overhangs the position of the sunscreen blind, you will need to allow at least 40mm of clearance above the Pelmet Bracket. This allows the Pelmet the space to hook onto the Pelmet Bracket.

Ensure Brackets are facing up (as per illustration.) Space the brackets evenly along the width of the pelmet - with the first & last pelmet brackets being installed at least 60mm inwards, from each end of the blind pelmet. Ensure brackets are level with each other before installing the sunscreen blind

### Wall Installation



### Ceiling Installation

### Ceiling Installation

If there is a wall or obstructions behind the position of the sunscreen blind. you will need to allow at least 40mm of clearance from the Pelmet Bracket. This allows the Pelmet the space to hook onto the Pelmet Bracket.

Ensure Brackets are facing up (as per illustration.) Space the brackets evenly along the width of the pelmet - with the first & last pelmet brackets being installed at least 60mm inwards from each of the blind pelmet.



← This end to face the front of the sunscreen position

← This end to face the back or to the wall



### Step 3. Blind Installation

#### Wall Installation

Hook the back of the pelmet channel on the top of the pelmet brackets, then rotate the sunscreen pelmet down and click into place

The bottom of the bracket has a spring tab which can be depressed,

\*You may need to depress the tab to ensure the sunscreen pelmet is fully locked into position

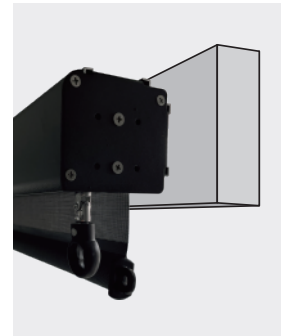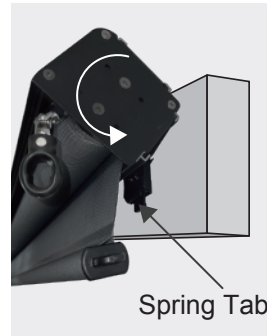

#### Ceiling Installation

Hook the back of the pelmet channel onto the back of the pelmet brackets, then rotate the sunscreen pelmet forward and click into place

The front of the bracket has a spring tab which can be depressed,

\*You may need to depress the tab to ensure sunscreen pelmet is fully locked into position



### Step 4. Final Set Up

Hand Crank – hook the hand crank handle into the bracket winder eyelet. The Blind can now be rolled up or down by rotating the crank handle.



Hold down Ties - The outdoor mesh blind includes 2 x hold down cords and 2 x hold down brackets – these are used to secure the bottom of both ends of your blind.


Loop the hold down cord through the end of the blind and back through itself to secure to blind. Complete again for opposite end.

Hold down brackets – Install the hold down brackets below the blind at a distance - to form a rigid connection between the Hold down cord and bracket.

Click the ball end of the hold down cord into the bracket to secure your mesh blind when rolled down



Hold Down Tie

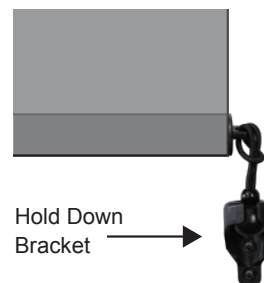

Hold Down Bracket

Note: During windy conditions your outdoor mesh blind should not be used and kept in a rolled-up position

**Do not use in extreme weather conditions: including heavy rain or high winds. Roll the outdoor sunscreen blind up in these conditions or when not in use.**

**SPOTLIGHT PTY LTD**  
**PO BOX 1135 South**  
**Melbourne VIC 3205**  
**service@spotlight.com.au**  
**PH: +613 9675 4000**  
**FAX: +613 9675 4583**